




Starkstrom

MODULAR SURGEONS' CONTROL PANEL

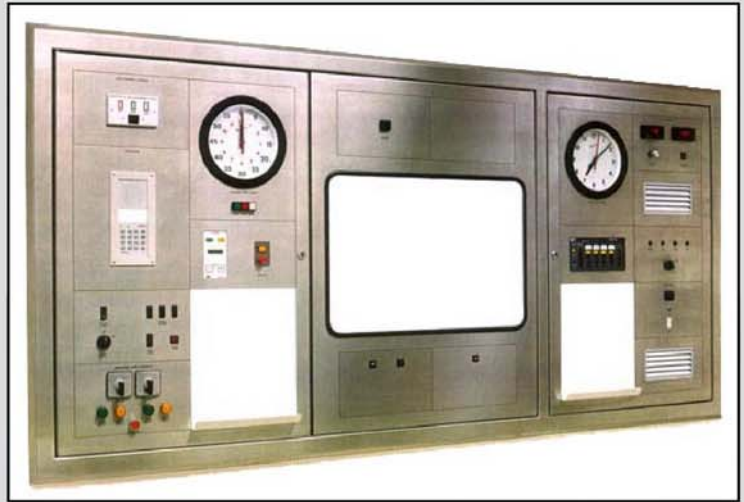


Standard dimensions for 1, 2, 3, 4, 6 and 8 x-ray screen variants enabling wall apertures to be prepared at an early stage

- 1st and 2nd fix configuration enables electrics and wall box to be installed and building construction stage whilst the clinical fascia is installed at "theatre clean" stage to prevent fascia damage.
- Screwless fastenings ensure a smooth, IPS65, easy to clean panel surface.
- Fully versatile CAD ensures rapid production of approval drawings.
- Dependent on the theatre layout, Starkstrom panels are provided with either front or rear access doors for service and maintenance.
- Choice of brushed grain or powder painted stainless steel finish to suit any theatre environment.
- Thousands of installations worldwide - PFI proven.

Providing a focal point for the monitoring and control of the operating theatre environment, Starkstrom's unique modular panels offer the following benefits:

- Each modular panel fascia is future proofed at design stage enabling upgrades to be carried out with minimal disruption and downtime.
- Client driven component changes can be easily accommodated during production with minimal cost and delays to delivery.
- Panels can be customised to clinical requirements.

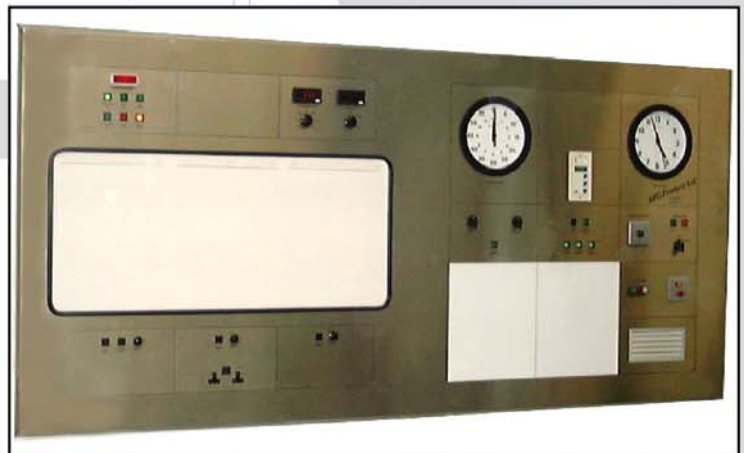

Integrated theatre control panels

Contains segregated ventilation compartments for IPS/battery backups/flatscreens/PACS viewers with computers/keyboards also available Starkstrom.



Starkstrom Ltd, 256 Field End Road, Eastcote, Ruislip, Middlesex, HA4 9UW, United Kingdom
Telephone: +44 (0)208 868 3732 Fax: +44 (0)208 868 3736
Website: www.starkstrom.com / info@starkstrom.com

